


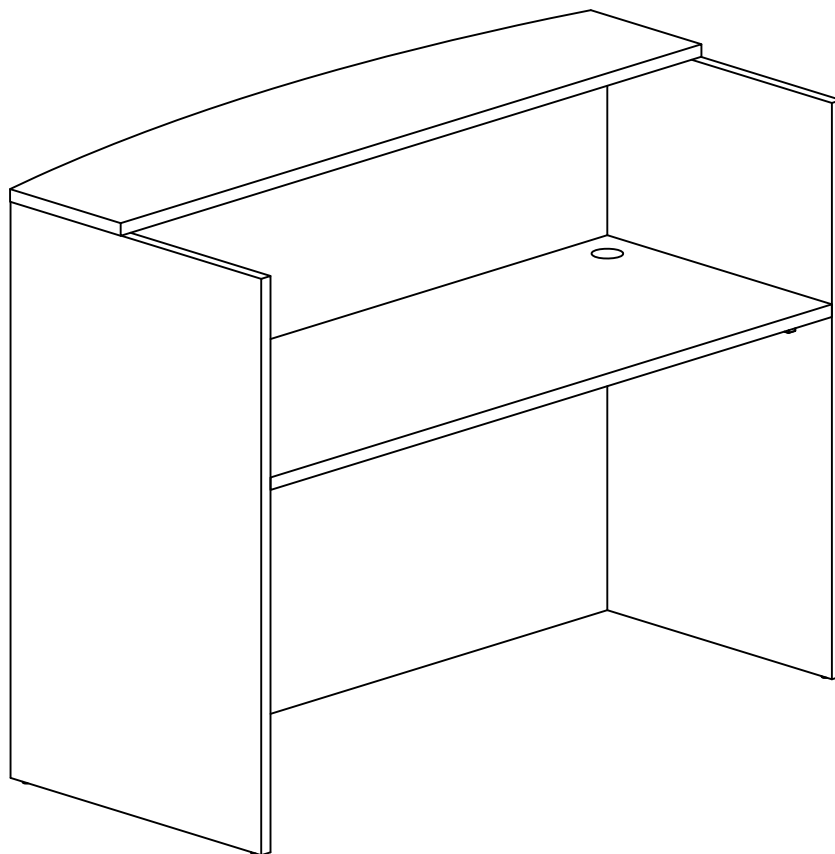

ASSEMBLY INSTRUCTIONS

Full Front Reception Desk 2

R2O-RD2



pin6×35



①

13PCS

Dowel8×30



②

10PCS

Cam Cover



③

13PCS

Fix Bolt6×30



④

9PCS

SCREW4×16



⑤

28PCS

Bracket



⑥








7PCS




Dowel8×25



⑦

6PCS

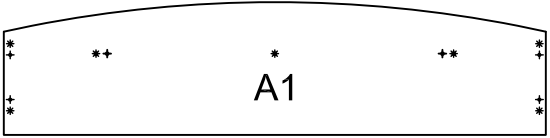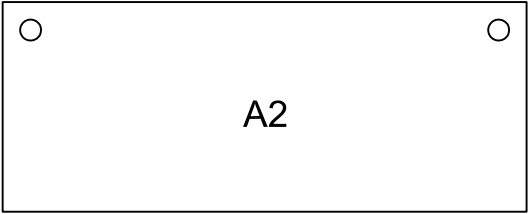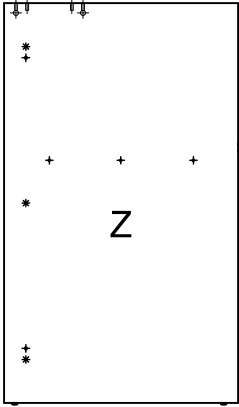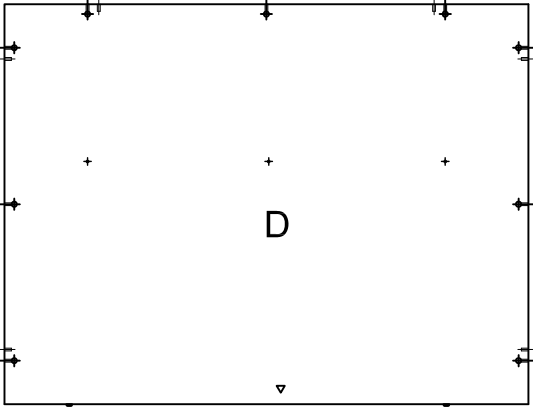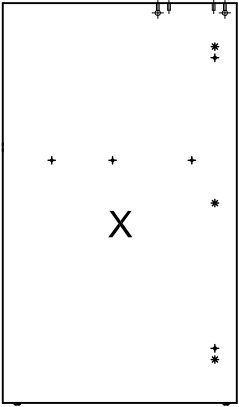

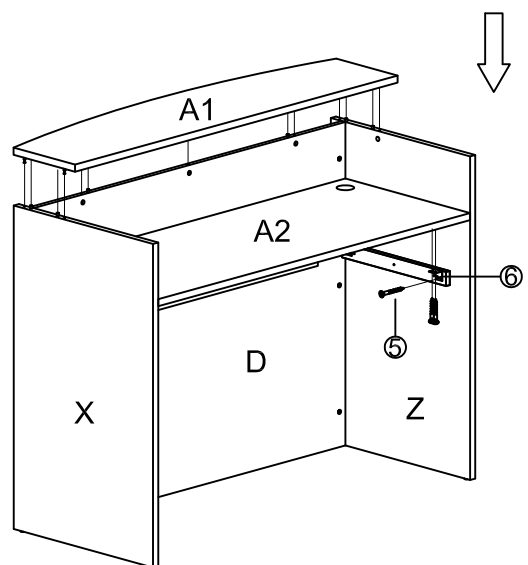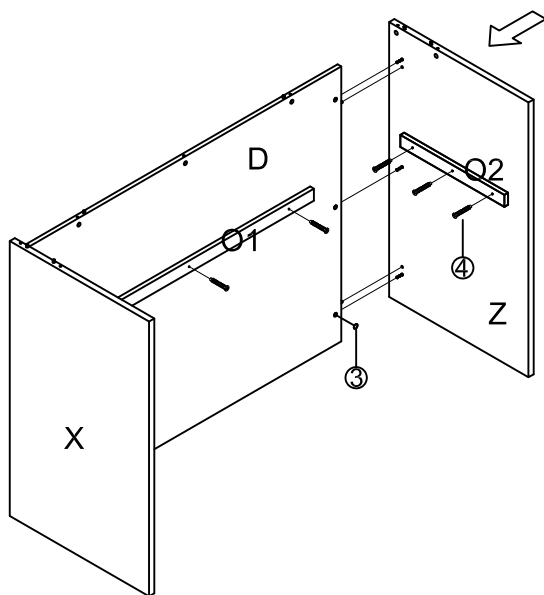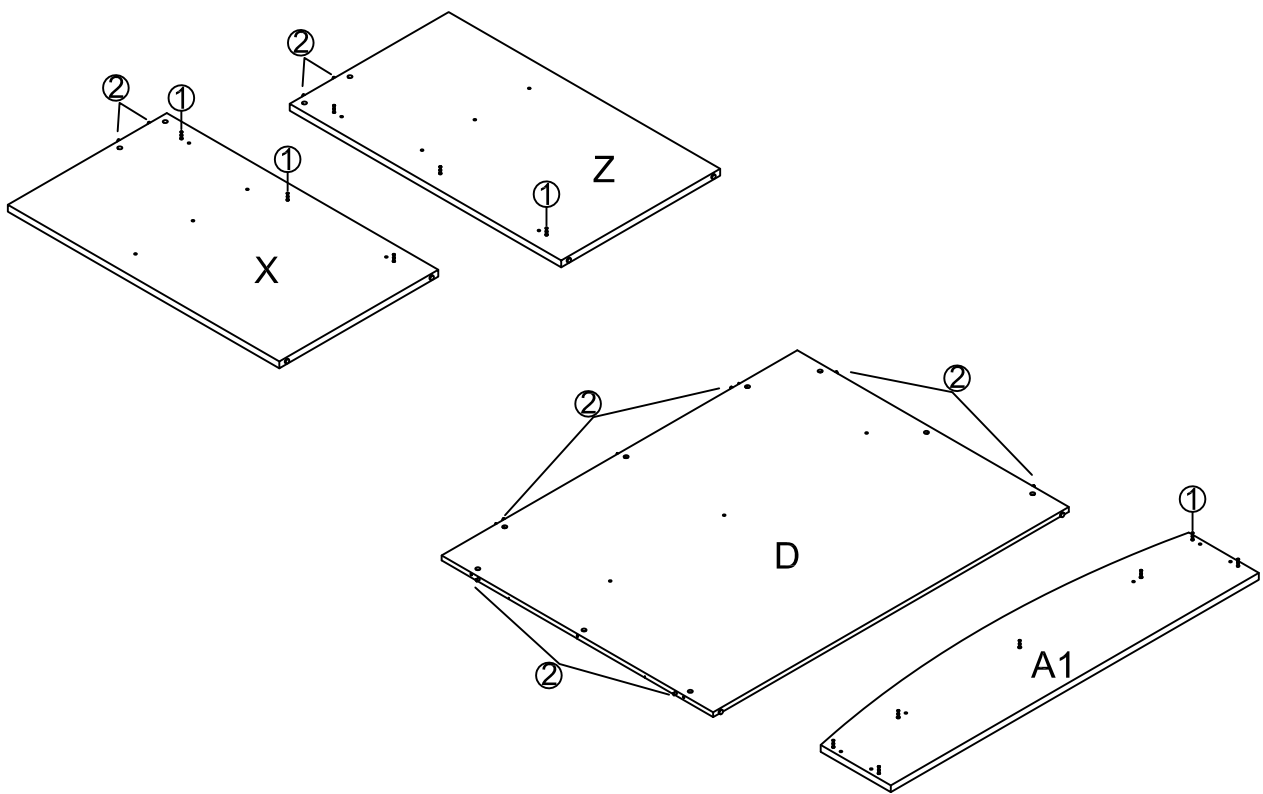









ASSEMBLY INSTRUCTIONS

Full Front Reception Desk 2

R2O-RD212

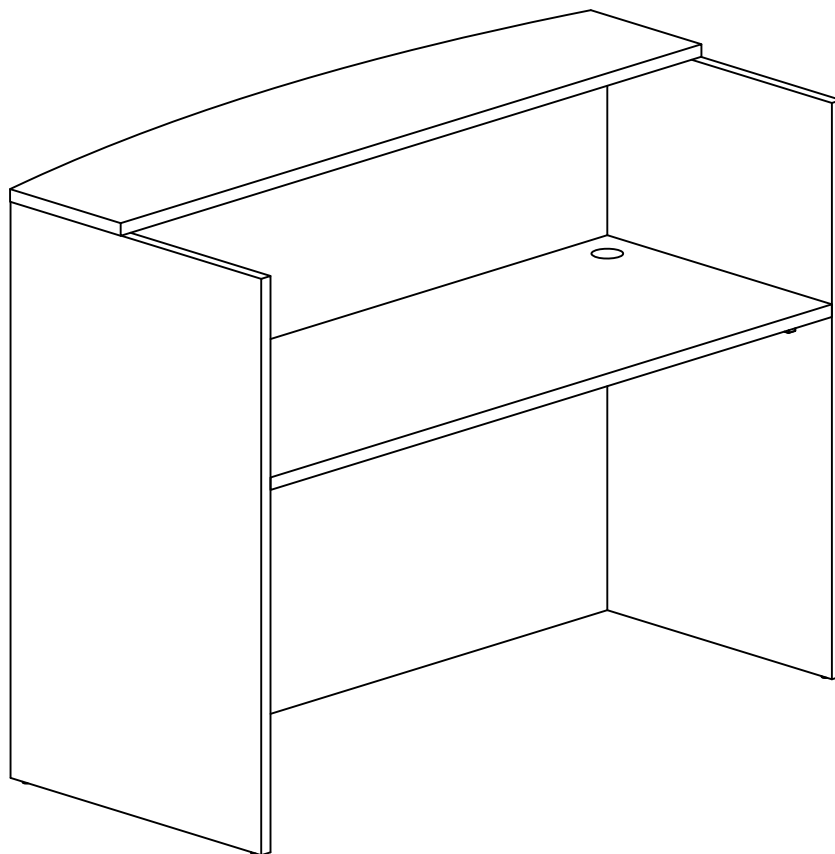

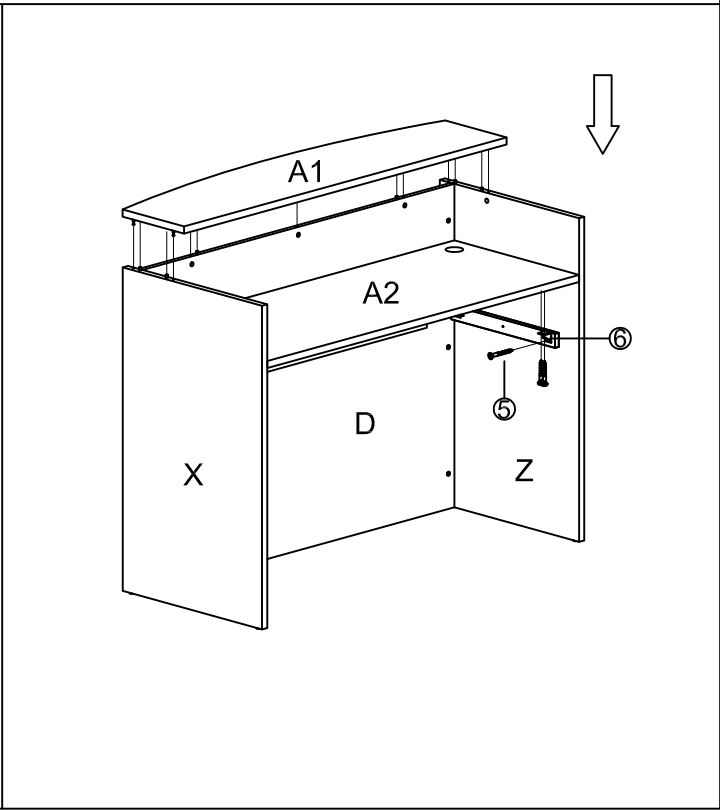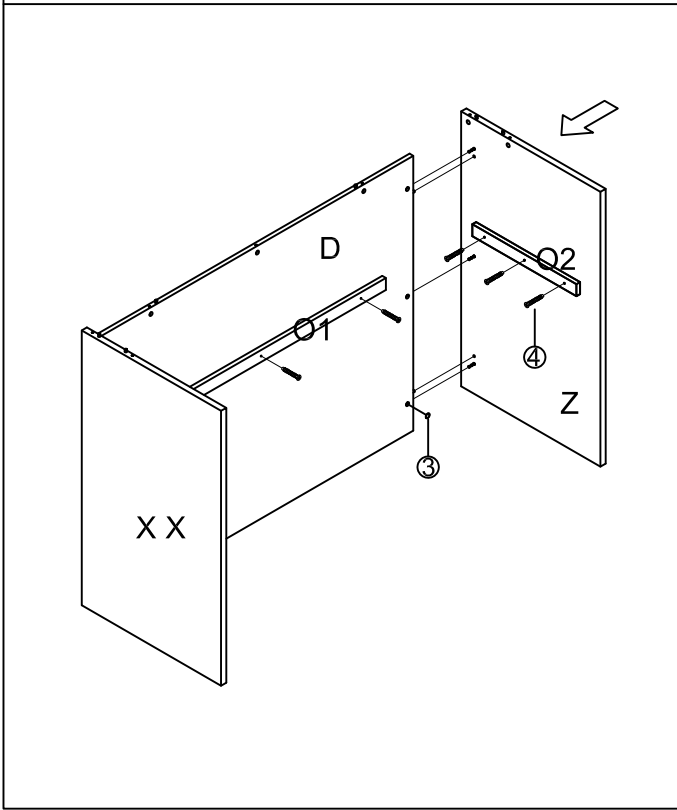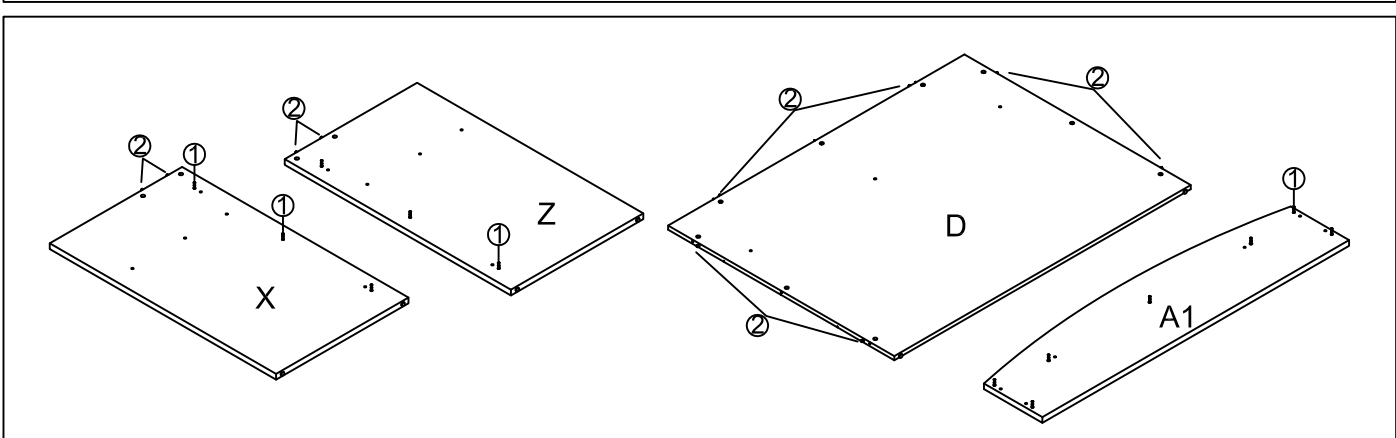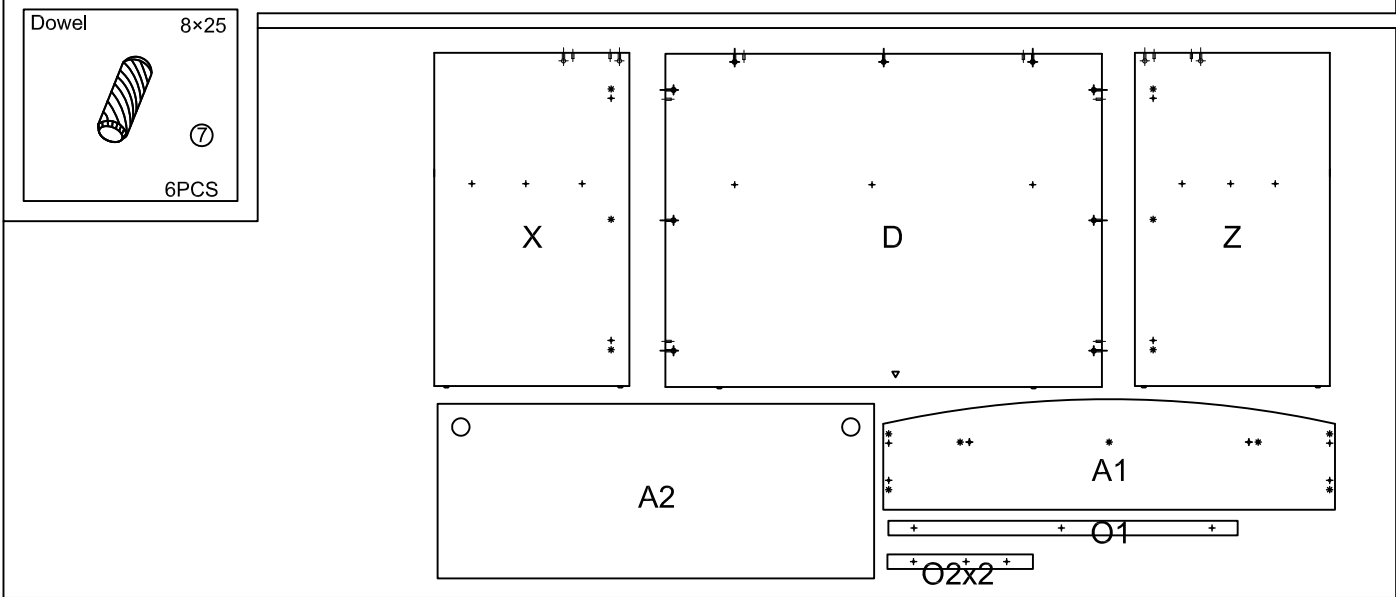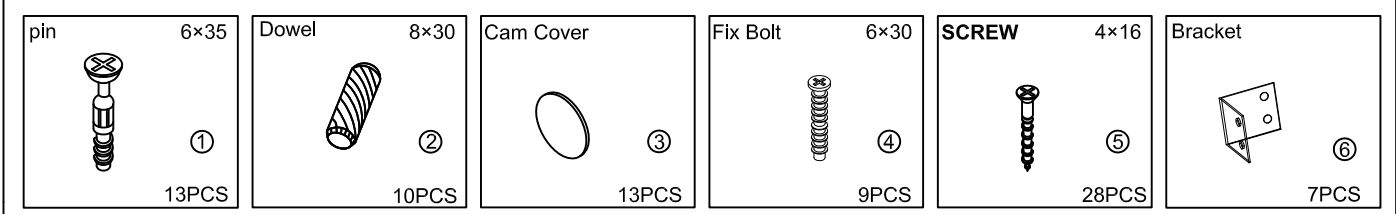




ASSEMBLY INSTRUCTIONS





Full Front Reception Desk 2

R2O-RD218

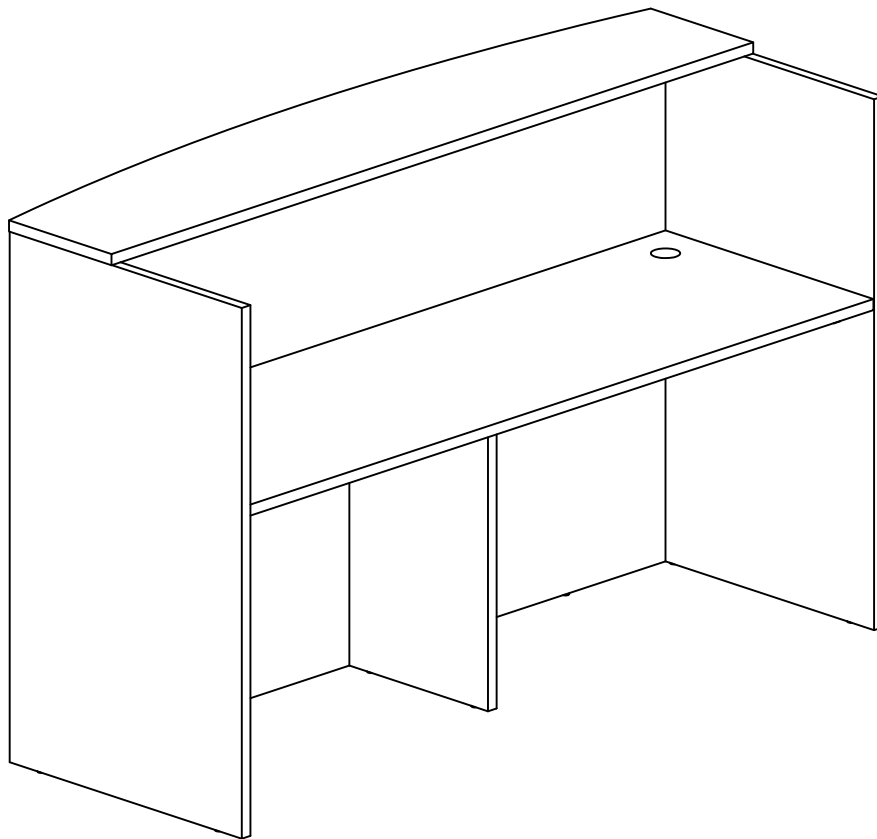

pin  6×35 ① 19PCS	Dowel  8×30 ② 17PCS	Cam Cover  ③ 19PCS	Fix Bolt  6×30 ④ 12 PCS	SCREW  4×16 ⑤ 34PCS	Bracket  ⑥ 8PCS
--	--	--	--	--	---


Dowel  8×25 ⑦ 9PCS









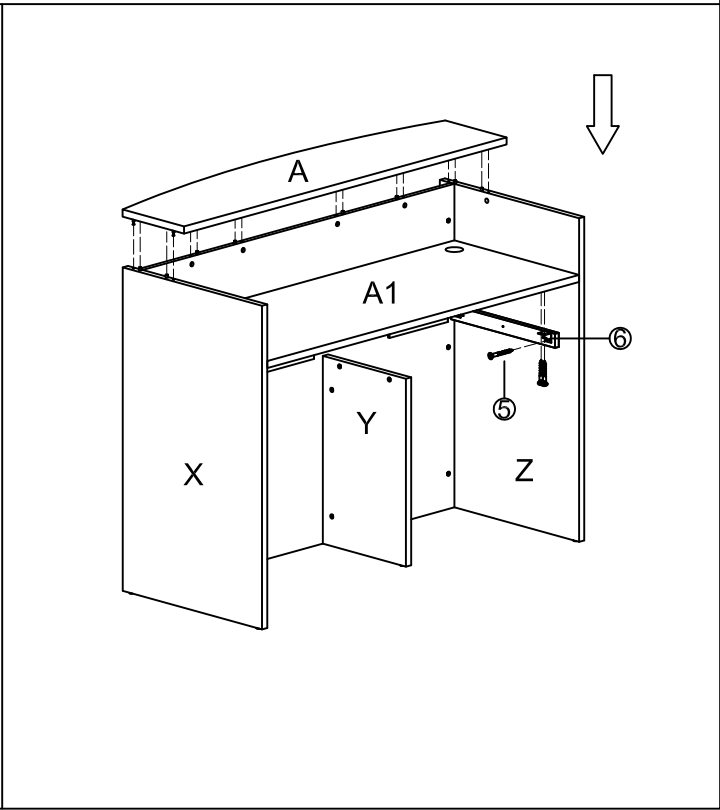
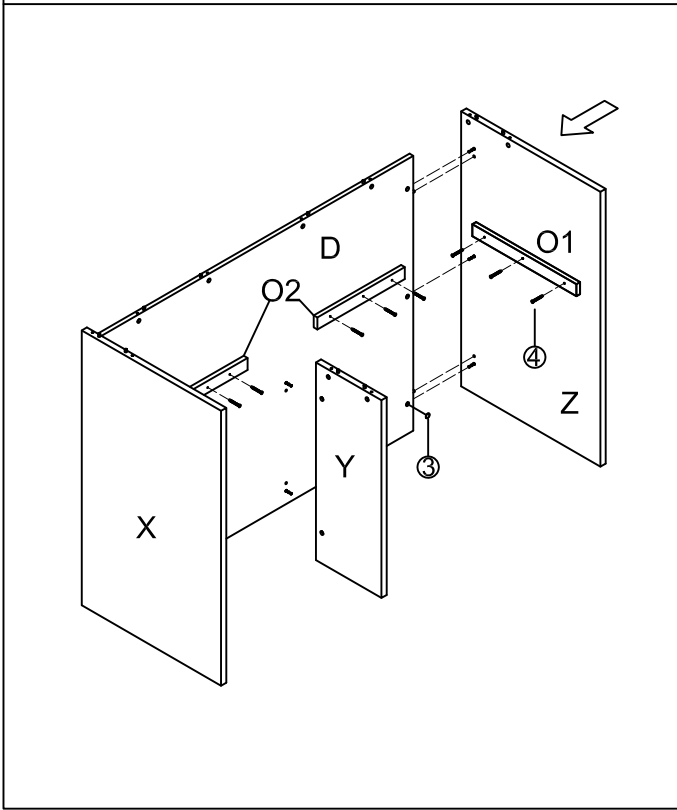
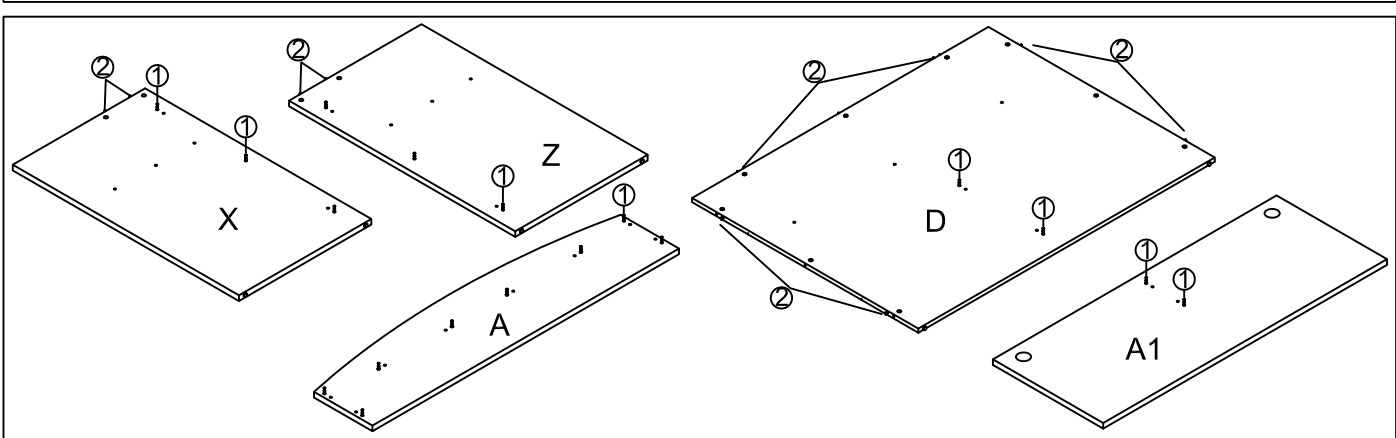
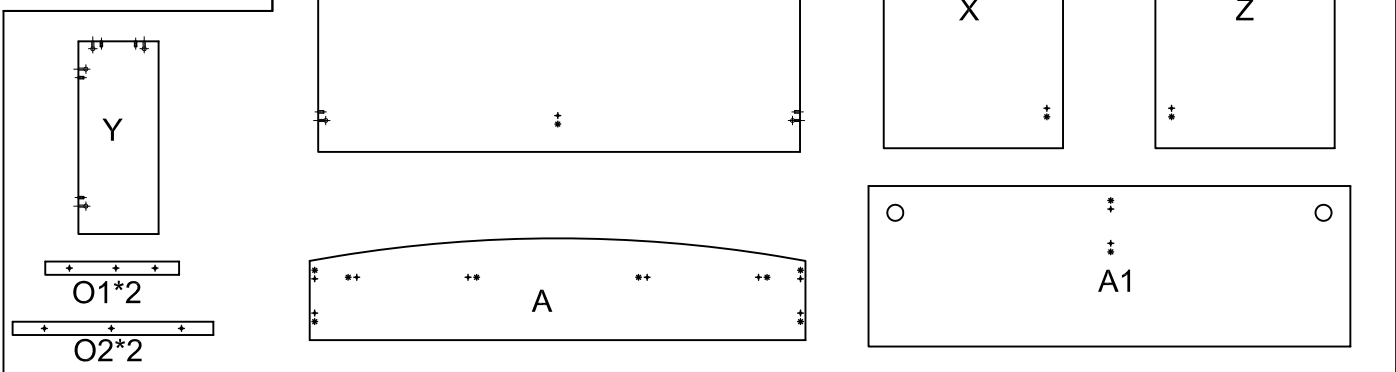


ASSEMBLY INSTRUCTIONS


Return for Reception

R2O-RD2RE

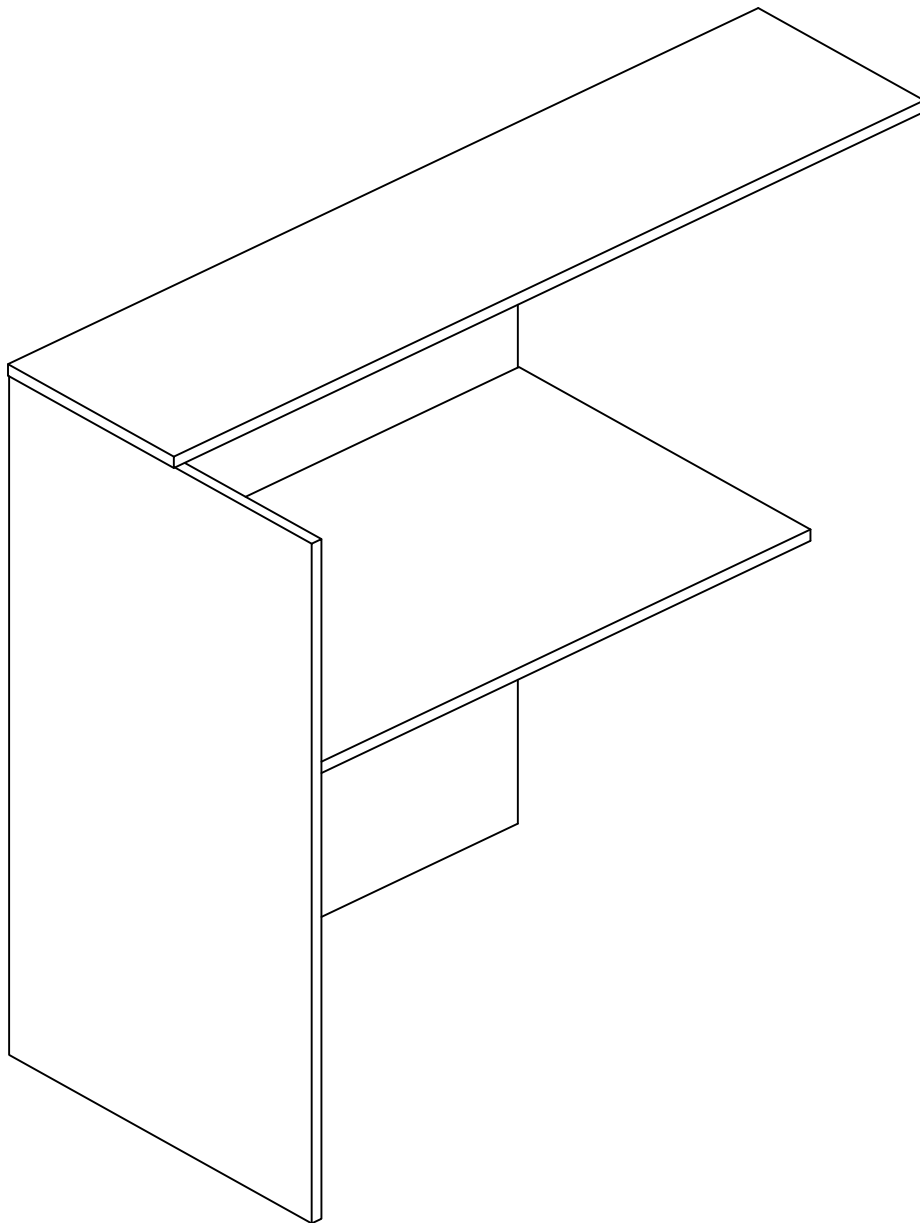

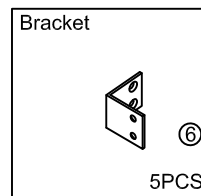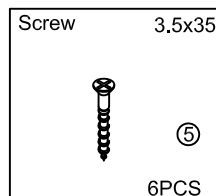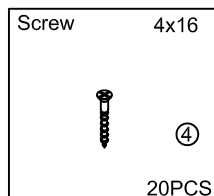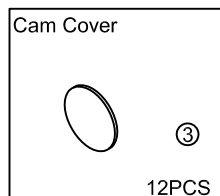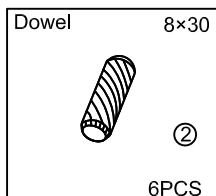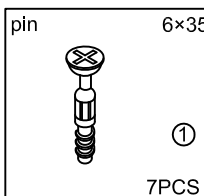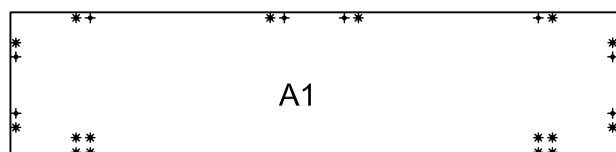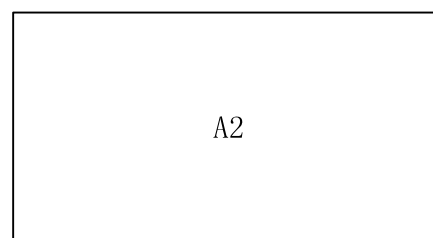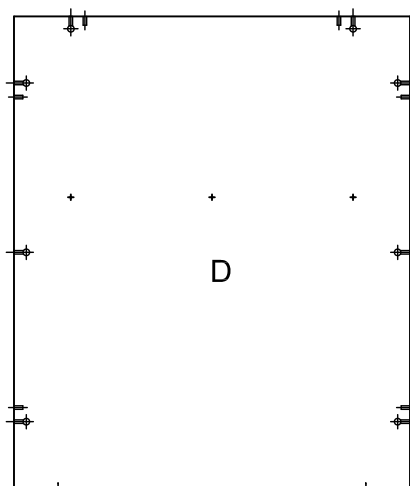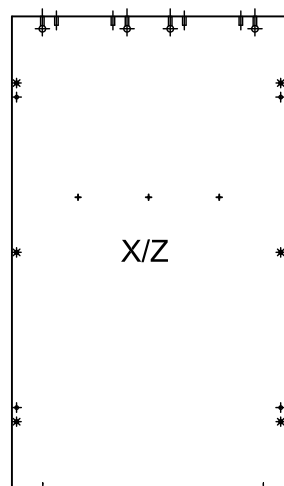


1

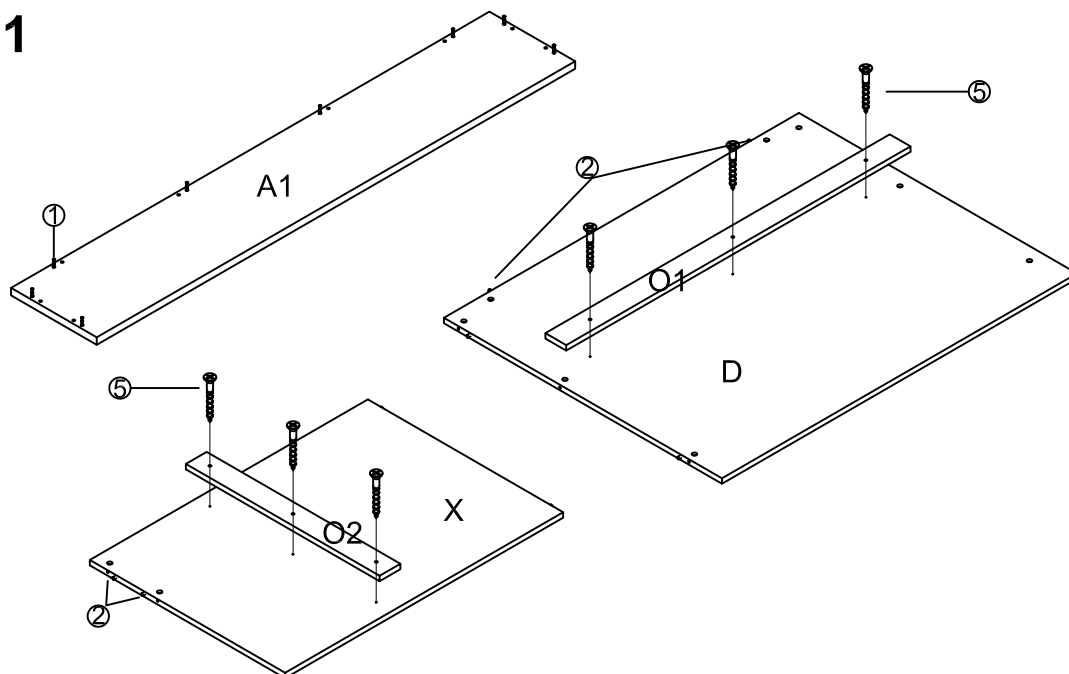

Preparation for Top panel A Side panel X/Z, back panels D, Batten O1, O2.

1. Fix cams on panel Y into cam bolts ① on panel D and tighten in a clockwise direction as illustrated above.
2. Joining panel D and side panel O1 with ⑤ and tighten in a clockwise direction as illustrated above.
3. Joining panel X, Z and side panel O2 with ⑤ and tighten in a clockwise direction as illustrated above.


2

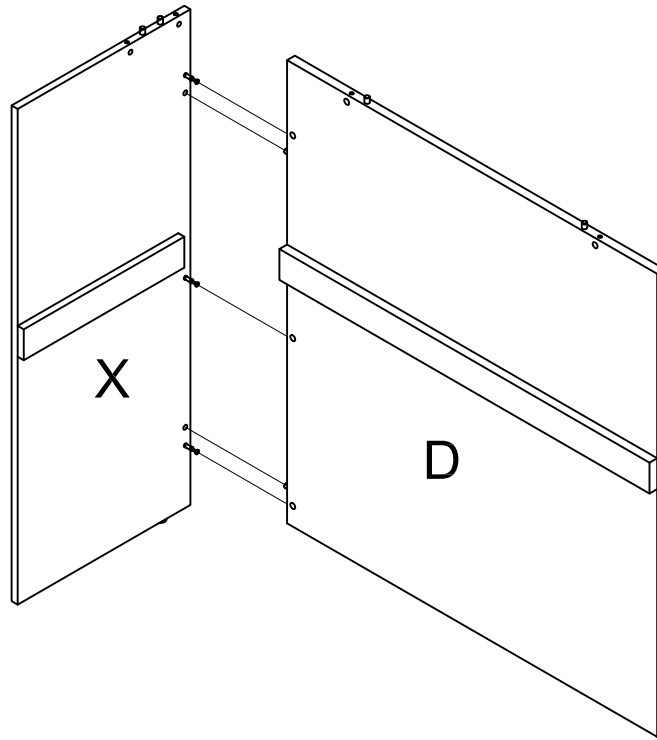

panel Z/X back panels D assembly.

- 1.Insert cam bolts ① on panel X and Z into cams on panels D and tighten in a clockwise direction as illustrated above.


3

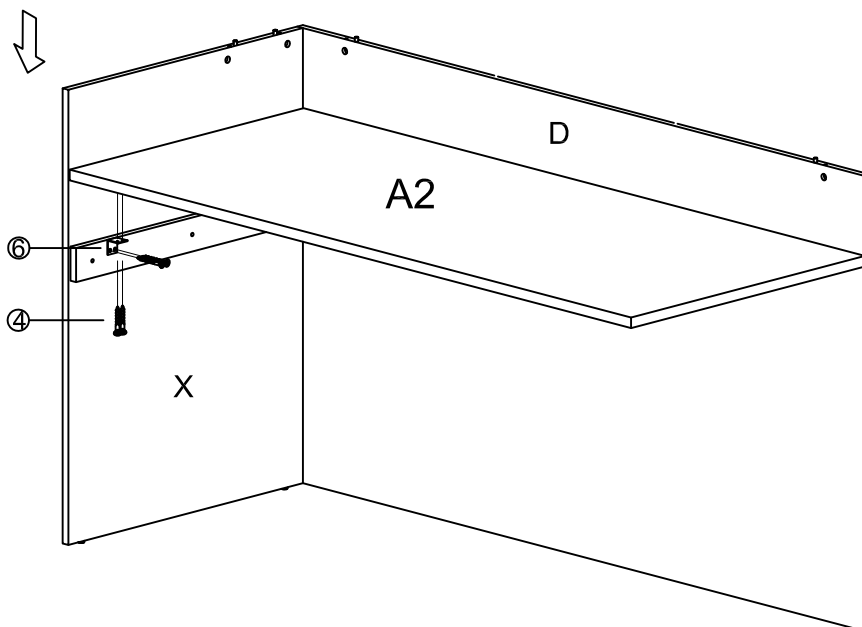

Desk top panel A assembly.

- 1.Joining panel D and side panel X/Z with ④⑥ and tighten in a clockwise direction as illustrated above.
- 2.Joining panel A and side panel O1,O2 with ④ and tighten in a clockwise direction as illustrated above.

2

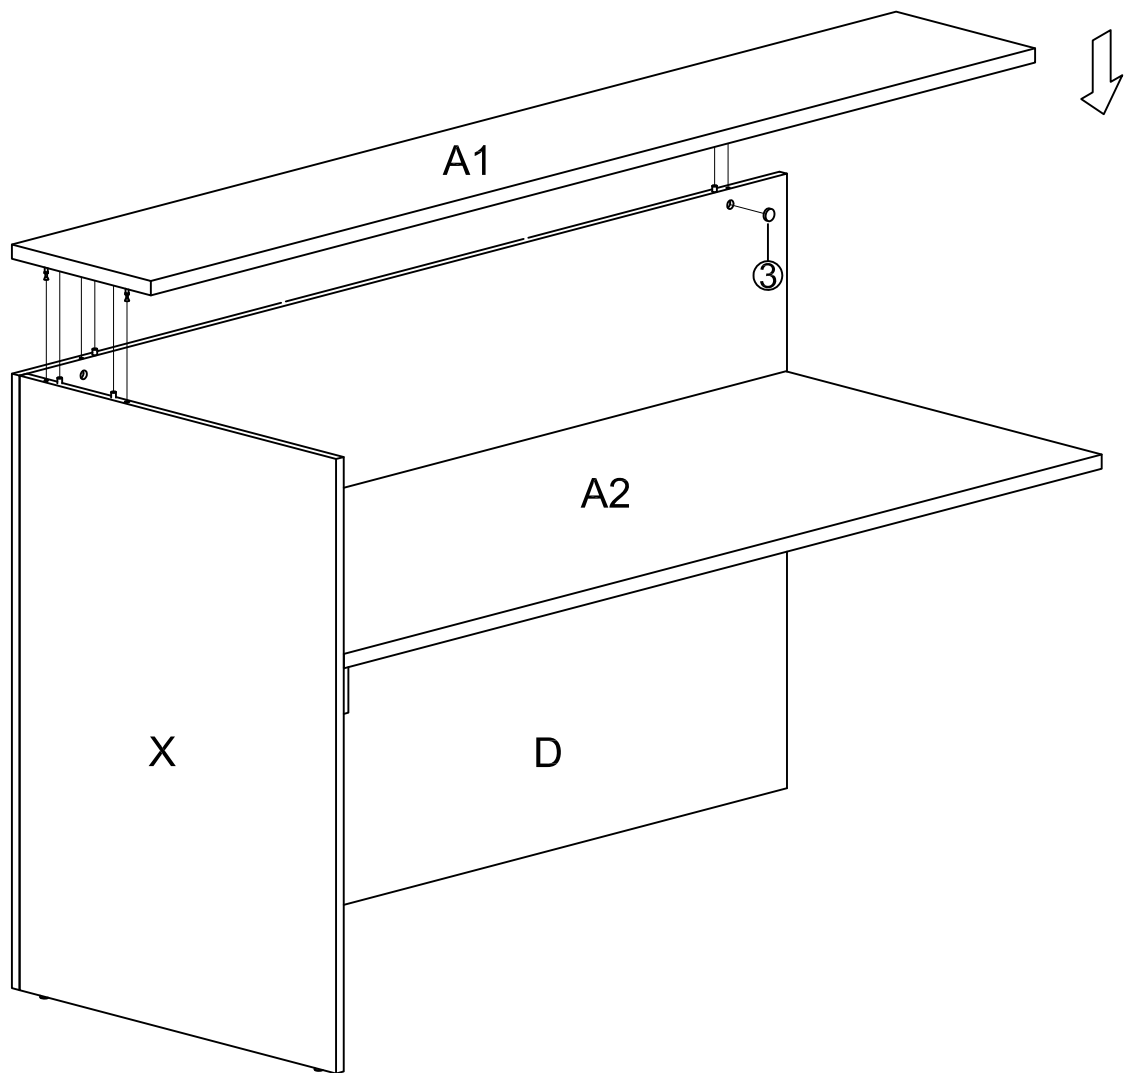

Desk top panel A1 assembly.

1. Insert cam bolts ① on panel A1 into cams on panels Z/X and D and tighten in a clockwise direction as illustrated above.