

# 4 LEG CHAIRS





Albury Side, Albury Arm, Bronte, Chevron, Coogee & Stockholm Metal & Timber Chairs



scan me

## PARTS:

## TOOLS (NOT INCLUDED):

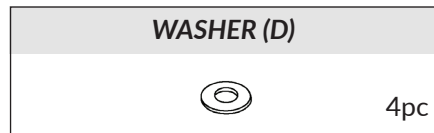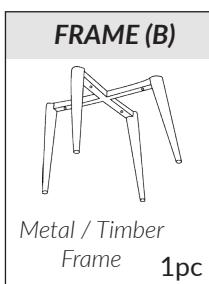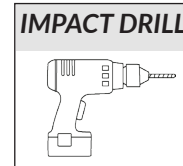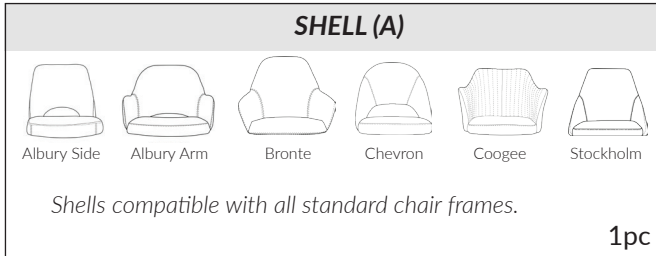

We strongly recommend applying thread lock to the full length of all screws and using an impact drill. Scan the QR code with a phone or tablet to access the assembly video.

### WARNING:

Always take care with an impact drill gun, especially when screwing into the frame.

## INSTRUCTIONS:

